



Installation and set up to be carried out in a safe and suitable manner by the necessary skilled personnel – please see “PDU Installation Guide” for further information.

STEP 1

Site the Unit in a suitable, stable location.

STEP 2

Connect the Unit to a suitable AC Power source, please ensure Circuit Breaker Protection if required, is appropriate for the expected current requirements.

STEP 3

Connect the Ethernet port on the Unit, to either a PC / Laptop or Suitable Network Hub. N.B. The Unit is supplied with DHCP enabled, (This means the PDU will automatically assign itself an IP address, in keeping with your Network).

STEP 4

Check the Units Display to find the assigned IP Address.

STEP 5

Enter the assigned IP address into the web browser on your PC / Laptop (For best results we recommend using Google Chrome).

STEP 6

Enter the default user name and password (User Name = admin, Password = admin) You will now be able to access the web browser for the Unit you have Selected, you will be able to measure, monitor and control (Depending on PDU Spec), Set thresholds and begin to receive alarm notifications.

STEP 7

Go to the configuration page tick iplite box and set up the Client Name, Location, and Cabinet ID, Set up your own Static IP Address, and also your email settings for Alarm Notifications.

STEP 8

Basic Installation is now complete. Further configuration may be required to suit your specific requirements.

Default IP Address 169.254.1.1 Default Subnet 255.255.255.0

For further information, product registration, and to receive our MiB File or our free of charge management software (PDU SNMP Agent) please contact technical@ipdu.co.uk, quoting your product serial number / part number.